



AUTHORIZED
Keystroke[™]
 DEALER

Thermal Transfer Bar Code Printer Print Mode

Some printers have the capability of printing with the Thermal Transfer Ribbon or Direct Thermal printing. Most of the time printers will automatically detect which system you are using. If not, follow these instructions:

1. On your PC, go to Start-> Programs-> MS-DOS Prompt.
2. At the MS-DOS prompt, type in *EDIT* and then press the Enter key. This will take you to the MS-DOS Editor.
3. In the Editor, type the following:

```
! (Space) 0 (Space) 0 (Space) 0 (Space) 0 (Enter)
V (Space) PRINT_MODE (Space) TT (Enter)      (TT is Thermal Transfer; DT is Direct Thermal)
V (Space) WRITE (Enter)
END
```

NOTE: Make sure that you type everything in CAPS and that you use the number 0 (zero), not the letter "o"!

4. Next, send the file to the printer by clicking on File -> Print . Press the Enter key to select OK to print the "Complete Document". If you are not using a mouse, you can hold down the ALT key and press **F**; then select **P** for print.

The green Ready light on the printer will blink off and on. Turn the printer off, then back on.

DGA Houston * 7320 Ashcroft Dr Ste 213 * Houston TX 77081-6336 * 713/772-9988
 Internet Web Site: www.dgahouston.com * E Mail: dga@dgahouston.com

bcpmode1.doc

COPYRIGHT/OWNERSHIP NOTICE: ©2001 DGA Houston, Houston TX U.S.A. This document is the sole property of DGA Houston. Unauthorized use or duplication strictly prohibited without prior written authorization.